Swiss Instruments Limited

Your product sourcing partner



Locker Solutions Brochure

www.SwissInstruments.com

Head Office (Toronto)

1920 Mattawa Avenue Mississauga, Ontario L4X 1K1

Phone: (905) 279-1275 Fax: (905) 279-8940

BELMAG INC (QC)

2255, Rue Guenette Saint-Laurent, QC Canada, H4R 2E9

Phone: (514) 636 8323 Fax: (514) 636-8327



Swisso Locker Systems

New customizable and modular locker systems



Swiss Instruments is happy to introduce our new range of customizable off the shelf steel locker systems. Our lockers are designed to provide exceptional strength and durability with quality materials and manufacturing.

Locker Build Quality


Our locker frames are resistance welded on all four corners to create a solid structure. The bodies are manufactured from 24 ga prime grade cold rolled steel and the doors are all welded double pan construction. To further enhance strength assembly is completed with pop riveting.

Locker Interior

Single Tier Lockers include one hat shelf and three coat hooks. Double Tier & Triple Tier Lockers include two coat hooks per compartment.

Standard Locker Dimensions

Width	Depth	Height
12"	12"	72"
304.80m	m 304.80mr	n 1828.80mm
12"	15"	72"
304.80m	m 381.00mm	n 1828.80mm
12"	18"	72"
304.80m	ım 457.20mn	n 1828.80mm
15"	15"	72"
381.00m	m 381.00mm	n 1828.80mm
15"	18"	72"
381.00m	m 457.20mn	n 1828.80mm
18"	18"	72"
457.20m	m 457.20mm	n 1828.80mm

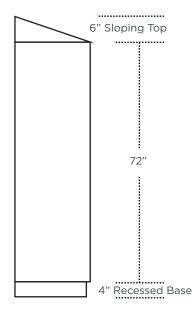

Locker Materials:

- Frames 16 ga
- Doors 20 ga
- Shelves 24 ga
- Bodies 24 ga
- Nickel plated coat hooks
- Aluminum recessed padlock

Available Options:

- Slipping tops (Helps eliminate dust build up)
- Recessed base (Prevents fluid from entering lockers
- Number plates
- Coat rods
- Cylinder locks
- Coin operated locks
- Galvanized construction



Personal Constable Lockers

Extra security and drawer storage lockers

Designed with police, army, emergency, correctional, military, special forces and federal, provincial and municipal employees in mind, these lockers have special features built in. Each locker features double pan doors, lockable gun drawers and a recessed base.



Lockable gun drawer and Coat Bar

An interior lockable gun drawer provides extra security, while hooks inside as well as on the door and a coat bar make it easier to hang and organize additional equipment and clothing.



Standard Features:

- Double pan doors
- Lockable gun drawer
- Coat bars and hooks
- Recessed base
- Fully assembled
- 16 Colour choices

Optional Features

- Sloping tops
- Boot shelves
- Mesh doors
- Built-in locks
- Custom sizes
- Mononock stick holder
- Lower storage drawers

Lower drawer storage

With optional lower drawer storage, these lockers can keep footwear separate for better ventilation, drying and reduced odor. Ideal to keep uniforms clean and dry. The drawers also create an ideal platform for sitting or changing to save space and streamline any locker room.



Available in These Sizes:

Widths: 18", 24" Depths: 18", 21", 24"

Height: 76"

Customizable features and sizes to meet your needs

Our constable lockers come solidly built no matter how you need to customized them for your needs. Mesh doors help with aerating clothing and equipment to help keep them dry and ready for use. Contact Swiss Instruments with your needs so that we can work with you to get the locker that's perfect for your needs.



Mining Locker Series

The perfect heavy duty industrial locker

These lockers have been specifically designed for the mining, forestry, petroleum, chemical manufacturing and other heavy industries. Built with heavy duty catches, double vented doors, personal effects shelf, a boot rack, maple wood bench and an easy clean bottom sweep out, these lockers are perfect for industries where equipment, and clothing tend to get wet and dirty.





Personal effects shelf & vented doors

The personal effects shelf is vented as well as providing a separate clean area to store personal effects from dirty, muddy or wet uniforms and gear. The vented doors help with odor and drying of clothes and help keep the locker room a tidy place.

• Double pan doors

Standard Features:

- Coat hooks
- Fully assembled
- 16 colour choices
- Vented body and doors
- Easy clean bottom sweep out

Heavy duty shelving

The shelves are formed from 18 ga cold rolled steel and flanged on all sides with a u-channel flange on the front of extra rigidity and support. The shelves can optionally be perforated for additional ventilation.

Optional Features

- Sloping tops
- Mesh doors
- Built-in locks
- Custom sizes
- Coat bars
- Custom ventilation

Available in These Sizes:

Widths: 15", 18", 24" Depths: 18", 21", 24" Height: 84", 90"



Boot rack and Maple Wood Bench

A convenient boot rack is perfect for hanging wet boots out to dry for the next work day. The maple wood bench is a nice touch and provides additional room for changing. There is also an easy clean bottom that makes it easy to sweep out dirt, mud and whatever else settles to the bottom of the locker.

Institutional Locker Series

Perfect for small to large institutions

Designed with schools, hospitals, emergency services and correctional institutions in mind our institutional locker series provides all the basic features needed in a locker while offering options to customize them to your specific needs.

Standard Features:

Door

- 16 ga outer reinforced with welded 16 ga full length z-channel
- Double pan construction
- Comes with 2 mechanically fastened bumpers

Door Frame:

• 16 ga frame resistance welded on all corners and formed to provide 3 sided full length door strike

Body:

- 20 ga shelf reinforced by a welded hat channel under front edge
- 16 ga galvanized bottom reinforced with welded 16 ga hat channel painted
- 24 ga top, back and sides polyester prepaint steel

Hardware:

- 16 ga full length piano hinge welded to frame
- Heavy duty 1/4" wire chrome plated coat hooks
- Anodized aluminum handle

Paint Finish:

- All parts are treated with an Iron-phosphate multi-stage process
- All parts receive a high quality powder coat finish

Optional Features:

- Sloping tops
- Recessed base
- Number plates (plastic engraved)
- Custom colours
- Coat rods



- Cylinder locks
- Coin operated locks
- Galvanized construction
- · Double hook under shelf
- Heavier gauge body panels





Locker Options & Colours

Create your perfect locker system with optional accessories

Swiss Instruments can help you create the perfect locker for your needs by customizing any of our locker series with optional accessories and features to meet your needs. We also have 16 standard colour options available to create a pleasing locker room environment.















Locking Options

Outfit your locker with a key lock, digital lock or coin operated system



Swiss Instruments Limited

Your product sourcing partner

www.SwissInstruments.com

Head Office (Toronto)

BELMAG INC (QC)

1920 Mattawa Avenue Mississauga, Ontario L4X 1K1 2255, Rue Guenette Saint-Laurent, QC Canada, H4R 2E9

Phone: (905) 279-1275 Fax: (905) 279-8940 Phone: (514) 636 8323 Fax: (514) 636-8327